



 
Smart Home Window/Door Sensor

QUICK START GUIDE


EN

At a Glance

Thank you for choosing the **Smart Home Window/Door Sensor**. The **Window/Door Sensor** monitors the opening and closing of doors and windows, notifying you when changes occur.

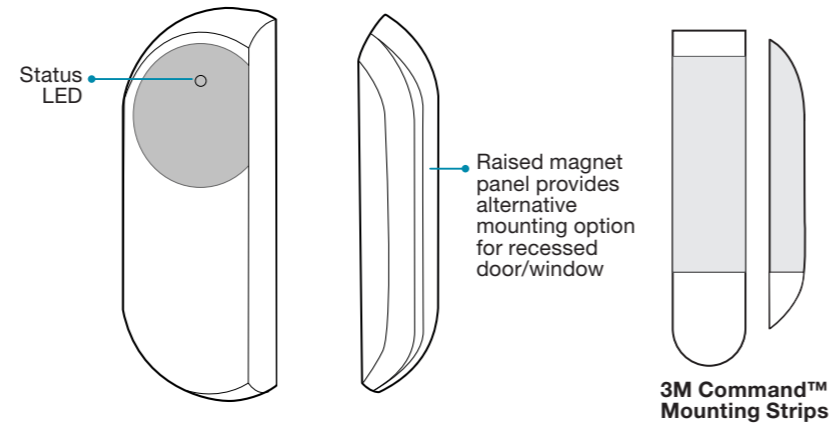

Where to Install the Window/Door Sensor

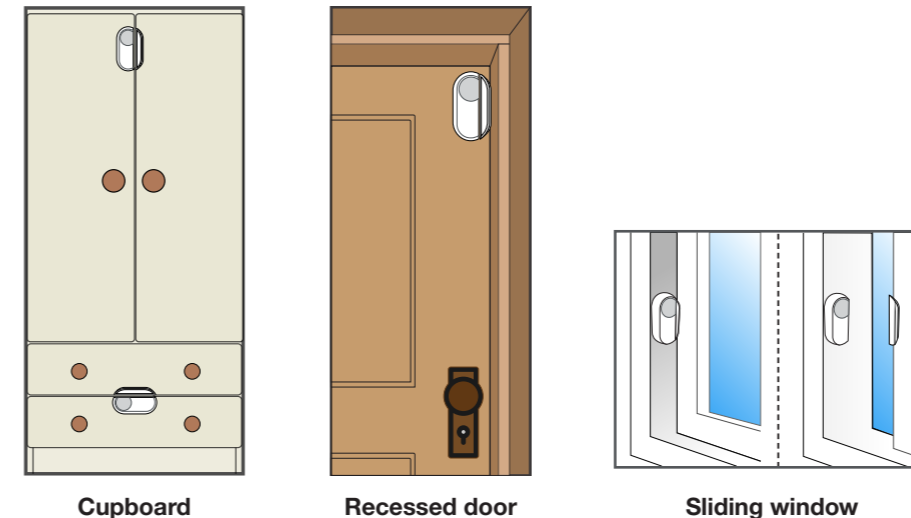 


Limited Warranty Terms & Conditions

Swann Communications warrants this product against defects in workmanship and material for a period of one (1) year from its original purchase date. You must present your receipt as proof of date of purchase for warranty validation. Any unit which proves defective during the stated period will be repaired without charge for parts or labour or replaced at the sole discretion of Swann. The end user is responsible for all freight charges incurred to send the product to Swann's repair centres. The end user is responsible for all shipping costs incurred when shipping from and to any country other than the country of origin. The warranty does not cover any incidental, accidental or consequential damages arising from the use of or the inability to use this product. Any costs associated with the fitting or removal of this product by a tradesman or other person or any other costs associated with its use are the responsibility of the end user. This warranty applies to the original purchaser of the product only and is not transferable to any third party. Unauthorized end user or third party modifications to any component or evidence of misuse or abuse of the device will render all warranties void. By law some countries do not allow limitations on certain exclusions in this warranty. Where applicable by local laws, regulations and legal rights will take precedence.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

 CE marking on this product represents the product is in compliance with all directives that are applicable to it.

Correct Disposal of this product

 
This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environment safe recycling.

Battery Safety Information

Caution: Keep batteries away from small children. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries promptly in accordance with local regulations.

Activating the Window/Door Sensor

- 1 Open the sensor by pushing back the release catch on top. The front panel should come off easily.
- 2 Remove the battery tab to activate the sensor.

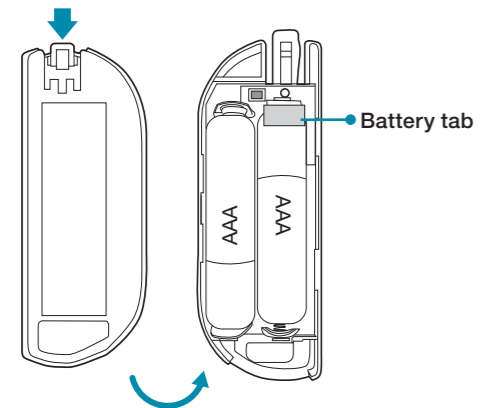


Pairing the Window/Door Sensor

- 1 From the Smart Home web portal, click or tap **My Settings > Window/Door Sensors > add device**. The System Setup screen is displayed and your Smart DVR/Hub automatically goes into pairing mode.

Note: You can skip this step if the System Setup screen is already displayed (during the Smart DVR/Hub registration process, or when you are setting up other smart home accessories).

 - 2 Press the **Connect** button on the sensor. The status LED blinks once. When the Window/Door sensor has paired with your Smart DVR/Hub, the status LED blinks twice.

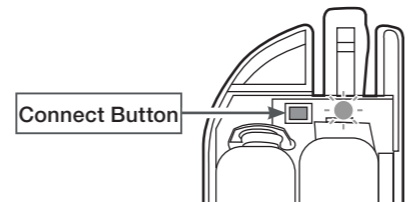

- 3 Follow the on-screen instructions to complete the setup.

Mounting the Window/Door Sensor

Please note that the components should be placed indoors only.

Take time to choose a location and properly check the orientation of the sensor and magnet. The sensor and magnet should ideally be positioned in a way that when the window or door is closed, they are aligned side by side, within $\frac{5}{16}$ " (8mm) from each other.

- 1 Before applying Command™ strips, clean the surface where the sensor and magnet will be mounted with an alcohol/cleaning wipe, and let dry.
- 2 Fit the sensor and magnet with appropriate sized strips, and then firmly press onto surface for 30 seconds each to secure.
- 3 To test if the sensor is working properly, simply open and then close the window/door. The status LED blinks each time the window/door is opened or closed, and depending on the mode your system is armed in, you will also get a notification.

Troubleshooting

The Window/Door Sensor is not pairing with my Smart DVR/Hub

Reset the Window/Door Sensor - press and hold the **Connect** button until the status LED blinks rapidly. Then, try pairing the Window/Door Sensor again.

The Window/Door Sensor no longer detects open/closed state changes

The Window/Door Sensor is running low on battery power. You can check the Window/Door Sensor's battery status via the Smart Home portal. If a Low Battery symbol is shown, replace the batteries in the sensor with two fresh "AAA" alkaline batteries immediately.

I want to re-locate my Window/Door Sensor. How do I remove the 3M Command™ Strips?

For instructions on removing 3M Command™ strips, refer to: http://www.command.com/wps/portal/3M/en_US/NACommand/Command/Resources/How-to-Use/

Where can I purchase additional 3M Command™ strips?

3M Command™ strips are available online and at many retail hardware stores.