

#### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

#### Battery Safety Information

Replace batteries at the same time. Do not mix new and old batteries or battery types (for example, alkaline and lithium batteries). Keep batteries out of reach of children. Dispose of used batteries promptly in accordance with local regulations.

 CE marking on this product represents the product is in compliance with all directives that are applicable to it.

 **Correct Disposal of This Product.** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environment safe recycling.




ENGLISH

# Chime Accessory

For Smart Video Doorbell Security System

# Chime Overview

The Chime accessory is a battery-powered indoor speaker that monitors for signals coming from your Smart Video Doorbell, and plays a melody when the front button of your Smart Video Doorbell is pressed.

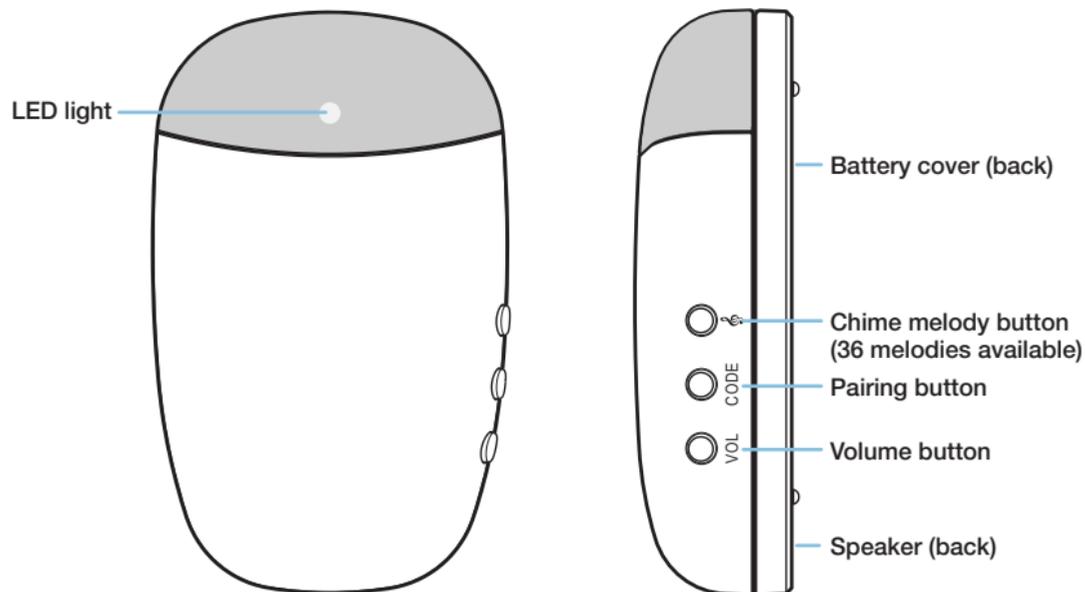

# Chime Setup

## Installing batteries & Pairing the Chime

1. To install batteries, open the battery cover on the back of the Chime and insert two new, high quality "AA" alkaline batteries, matching the polarity markings (+ and -) shown inside the battery compartment. Snap the battery cover back into place.
2. To pair with your Smart Video Doorbell, briefly press the Chime's **CODE** button, and then press the button on the front of your Smart Video Doorbell within 10 seconds. You'll hear the default chime melody as confirmation.

## Melody selection

To select a different melody, press the  button repeatedly to cycle through all the available sounds. Stop when you hear something you like. There is no need to confirm your selection.

## Volume control

To adjust the volume, press the **VOL** button repeatedly until the desired volume is obtained. You can also completely turn off both sound and LED light.

## Mounting the Chime

1. Insert the supplied screw (depending on the surface type, use a wall plug if needed) into the wall at the desired location, leaving it protruding slightly.
2. Hang the Chime on the screw through the keyhole slot on the back of the Chime and then slide the Chime down to ensure it sits firmly on the screw.